


ASSEMBLY INSTRUCTIONS

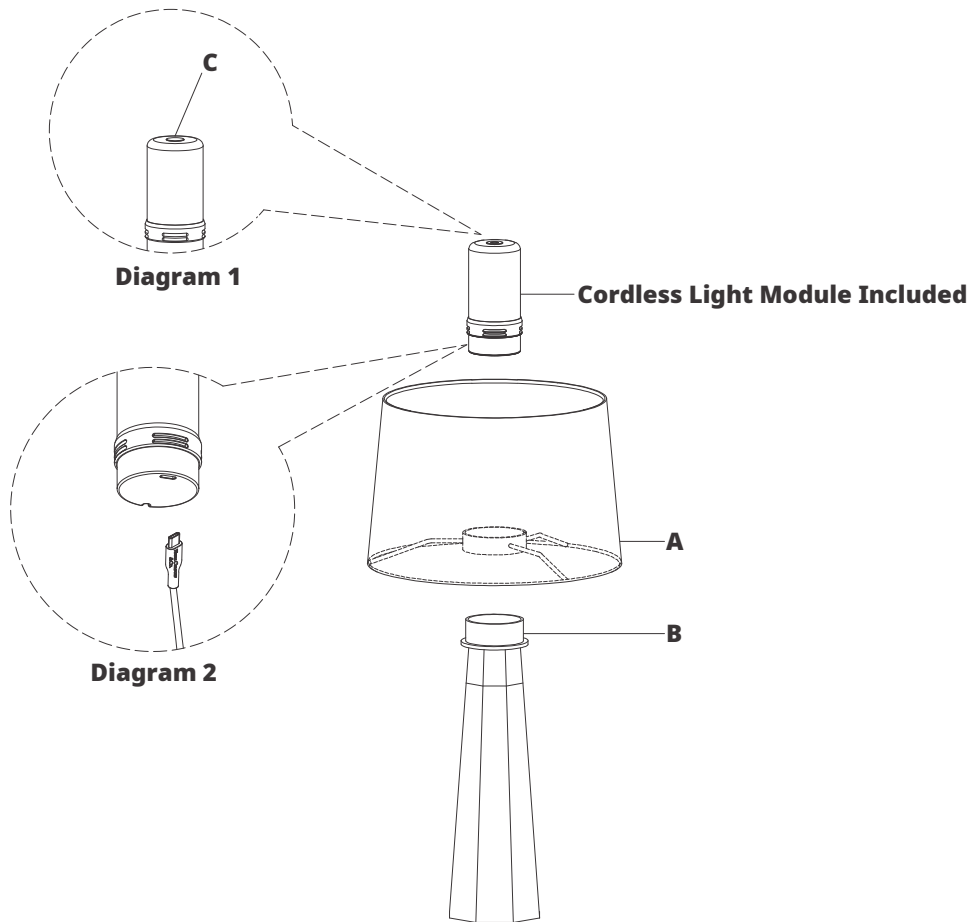

Olsen 15" Cordless Accent Lamp

Item # ARN3028-EU

NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove shade (A) from packaging and place onto cordless module holder (B).
3. Place cordless light module into cordless module holder (B).
4. For best results fully charge battery before use.
5. Test the lamp.

NOTE: If shade has additional packaging, carefully cut from interior of shade to avoid damage.

Dimmer switch operation: Touch dimmer (C) to adjust between high, medium, low and off settings (see diagram 1).

Charging Instructions: Remove cordless light module from lamp and charge using provided USB-C cord (see diagram 2).

NOTE: For convenience, USB-C to USB-A adaptor is included.

CAUTION: This product shall be supplied by a suitable adaptor which is approved by both IEC/EN/AS/NZS 61347-2-13 and IEC/EN/AS/NZS 60335-2-29 with proper output parameters.



USB TYPE C



USB TYPE A

CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.