ASSEMBLY INSTRUCTIONS

Diagram 1

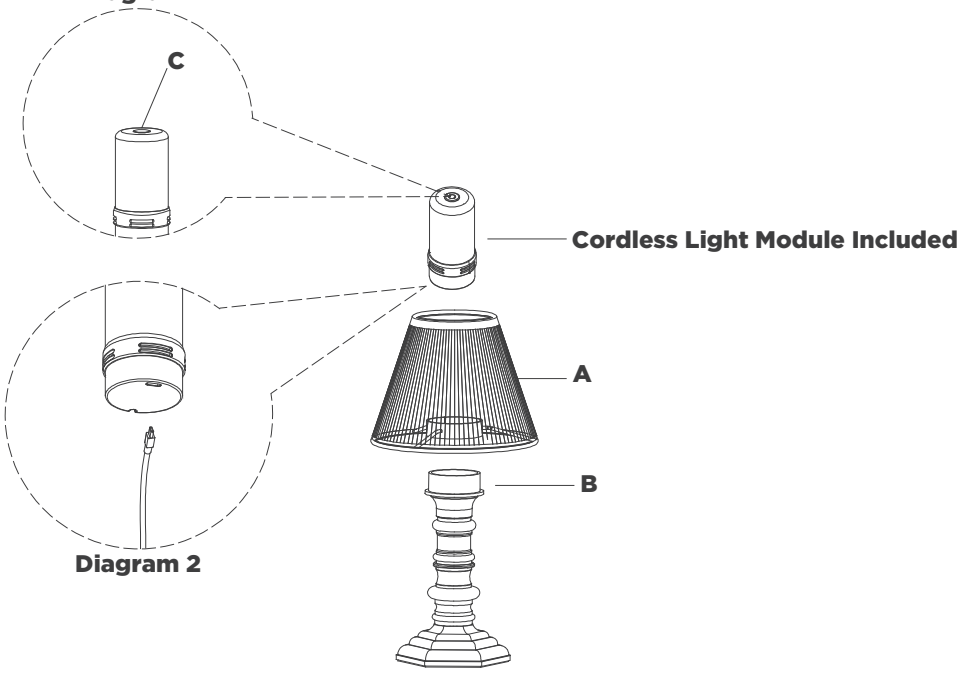


Diagram 2

Thatcher 12" Cordless Accent Lamp

Item # RL3055-EU

NOTICE:

Inspect item carefully before attempting to install. If there is any damage or obvious defect, do not install. Item may not be returned once it has been installed.

---

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove shade **(A)** from packaging and place onto cordless module holder **(B)**.
   NOTE: If shade has additional packaging, carefully cut from interior of shade to avoid damage.
3. Place cordless light module into cordless module holder **(B)**.
4. For best results fully charge battery before use.
5. Test the lamp.
   Dimmer switch operation: Touch dimmer **(C)** to adjust between high, medium, low and off settings (see diagram 1).

Charging Instructions: Remove cordless light module from lamp and charge using provided USB-C cord (see diagram 2).
NOTE: For convenience, USB-C to USB-A adapter is included.
CAUTION: This product shall be supplied by a suitable adaptor which is approved by both IEC/EN/AS/NZS 61347-2-13 and IEC/EN/AS/NZS 60335-2-29 with proper output parameters.





CARE INSTRUCTIONS: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

RALPH LAUREN

CE LED