

Farfalle Medium Chandelier

Item # JN 5501-EU

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):


Phillips Screwdriver Slotted Screwdriver Wire Cutters
Wire Strippers Wire Cutters Pencil

Hammer Drill

- 1. Carefully remove all parts from the box. Place on a clean, soft surface.
- 2. Remove mounting plate **(B)** from canopy **(F)** by removing collar ring **(G)**.
- 3. Using mounting plate **(B)** as a guide, line up with the ceiling and mark expansion anchors positions.
- 4. Using a drill bit slightly smaller than the expansion anchors, drill holes in the marked positions. Install expansion anchors and screws (A) into the holes using hammer.
- 5. Line up mounting plate **(B)** to expansion anchors and add washers, lock washers and mounting nuts **(C)**. Secure by tightening mounting nuts.
- 6. Feed electrical and ground wires through bottom rod (J) and connect to fixture body (K). Repeat for middle rod (I), connecting to bottom rod (J).
- 7. Continue feeding wires through collar ring **(G)**, canopy **(F)** and top rod **(H)**.
- Holding fixture upright, slide collar ring (G) and canopy (F) down and rest on fixture body (K). Then connect top rod (H) to middle rod (I).
 NOTE: Slide components down slowly to avoid damages.
- 9. Hang fixture swivel ball **(E)** to the center of mounting plate **(B)** and secure with set screw **(D)** using provided wrench. (See diagram 2)

VC GALLERY MILAN



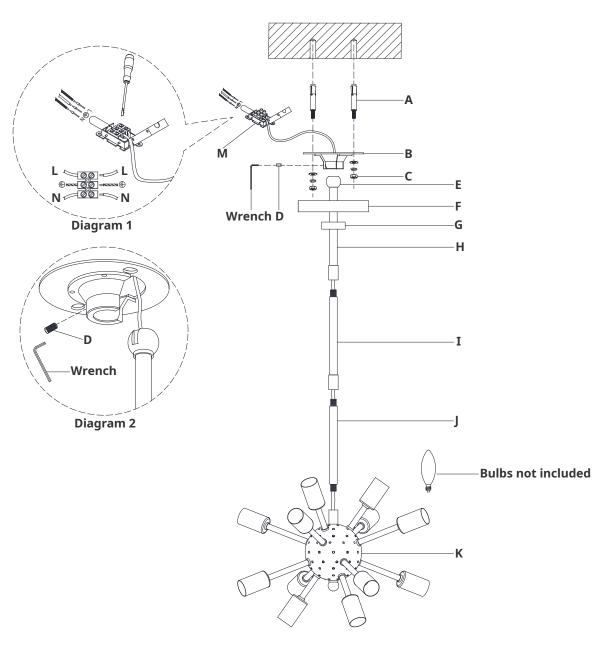

Farfalle Medium Chandelier


Item # JN 5501-EU


NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

- 10. Remove outer housing of wire by making a neat cut all the way around about 2.5 cm from the end. Once cut is made, remove and discard the piece of housing, exposing the electrical wires.
 - **NOTE:** Make sure not to cut too deep into housing or electrical wires could become damaged.
- 11. Separate wires, and strip insulation on each 6 mm.
- 12. Open terminal block **(M)** to prepare for installation of electrical wires. Use diagram 1 to reference electrical installation steps below.
- 13. Connect fixture ground (green) and supply ground (usually green or yellow) to terminal block **(M)** and secure with screws.
 - **NOTE:** It is imperative that the fixture is grounded.
- 14. Connect neutral wires (blue) to terminal block **(M)** and secure with screws.
- 15. Connect hot wires (brown) to terminal block **(M)** and secure with screws. Close terminal block **(M)**.
 - **CAUTION:** Do not reverse the hot and neutral connections.
- 16. Install canopy (F) to mounting plate (B) and secure with collar ring (G).
- 17. Install light bulbs into the sockets.
- 18. Install branches starting from the top (layer 1) and working your way to the bottom (layer 9) as shown in figures L1-L9.
- 19. Thread branch (Q) to finial (S) on the bottom of the center ball.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do Not use abrasive or chemical agents.

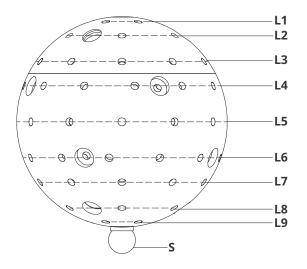


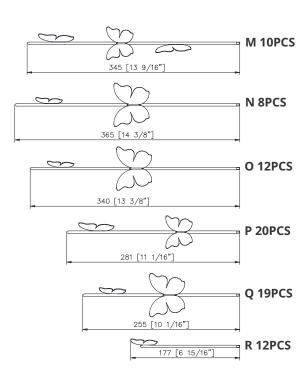

Farfalle Medium Chandelier

Item # JN 5501-EU


NOTICE:

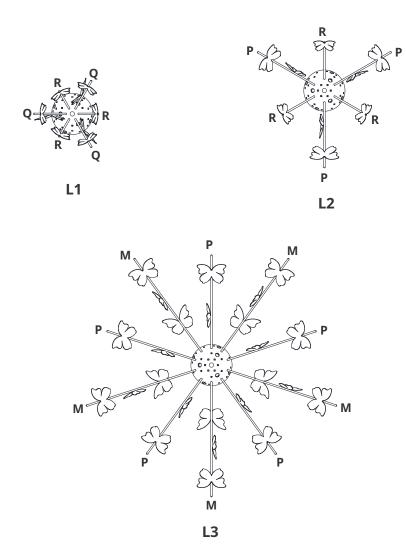

Farfalle Medium Chandelier

Item # JN 5501-EU


NOTICE:

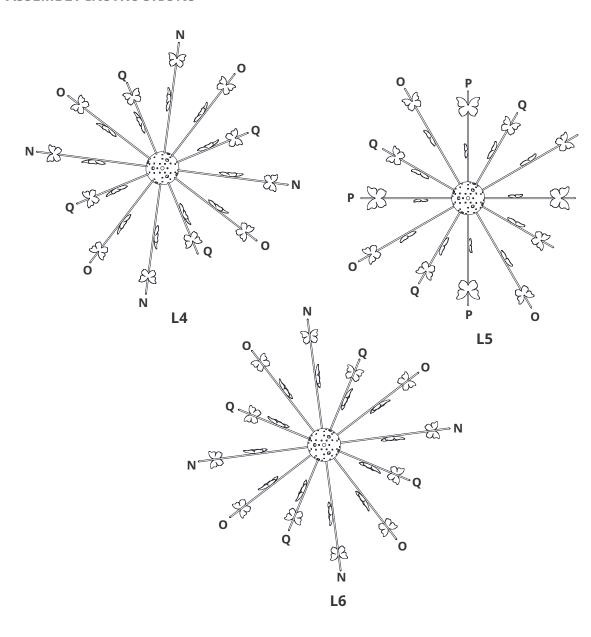



Farfalle Medium Chandelier

Item # JN 5501-EU

NOTICE:

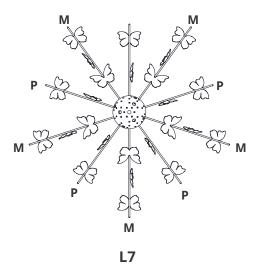

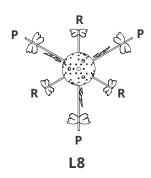



Farfalle Medium Chandelier

Item # JN 5501-EU

NOTICE: