
ASSEMBLY INSTRUCTIONS

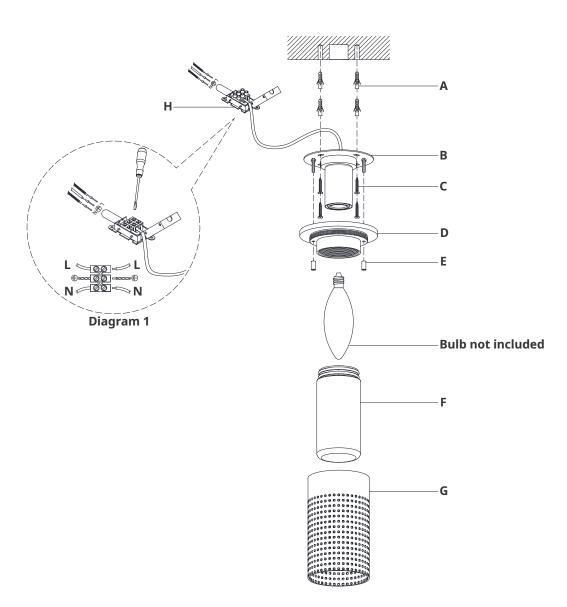

VC GALLERY MILAN

Precision Short Monopoint Flush Mount

Item # KW 4053-EU

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver Pencil Hammer

Slotted Screwdriver Drill

1. Carefully remove all parts from the box. Place on a clean, soft surface.


- 2. Remove mounting plate **(B)** from canopy **(D)** by removing threaded caps **(E)**.
- 3. Using mounting plate **(B)** as a guide, line up with the ceiling and mark anchor positions.
- 4. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors (A) into the holes using hammer.
- 5. Line up mounting plate **(B)** to ceiling anchors and secure with wood screws **(C)**.
- 6. Open terminal block **(H)** to prepare for installation of electrical wires. Use diagram 1 to reference electrical installation steps below.
- 7. Connect fixture ground (green) and supply ground (usually green or yellow) to terminal block **(H)** and secure with screws.
 - **NOTE:** It is imperative that the fixture is grounded.
- 8. Connect neutral wires (blue) to terminal block **(H)** and secure with screws.
- 9. Connect hot wires (brown) to terminal block **(H)** and secure with screws. Close terminal block **(H)**.
 - **CAUTION:** Do not reverse the hot and neutral connections.
- 10. Install canopy **(D)** to mounting plate **(B)** and secure with threaded caps **(E)**.







ASSEMBLY INSTRUCTIONS

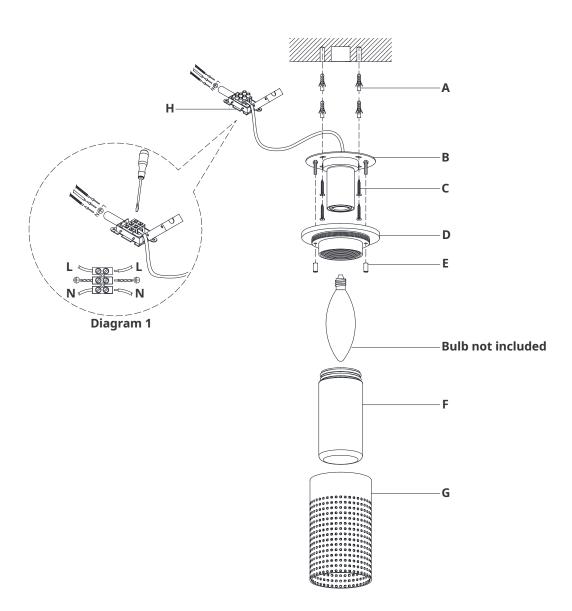

Precision Short Monopoint Flush Mount

Item # KW 4053-EU

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

- 11. Install light bulb into the socket.
- Thread glass shade (F) to canopy (D)
 NOTE: Do not over-tighten otherwise shade could become damaged.
- 13. Thread metal shad(6) to canop(D).

Care Instructions: Clean only with a soft dry cloth or feather duster. Do Not use abrasive or chemical agents.



